Griddle

User Manual

Please read this manual before using.



Thanks for your purchasing and using GH Series Contact Grill. For making full use of function of this product and reducing unnecessary damage and injure. Please read this manual carefully before using this machine and keep it well for future reference.


Warning! Any refitting and wrong installation, adjustment and maintenance can lead to property loss and causality. Please contact the supplier if user needs to adjust it and all these should be done by trained special professionals.

Warning! For your safety sake, do not put or store any flammable liquid, gas or other objects around the product.


Warning! The shell of this equipment must be grounded for safety sake. Thanks for your cooperation!

TT Series Contact Grill is designed and developed by the company with combination of the advantage of both foreign and domestic similar products and achieves advantages such as fashionable design, reasonable structure and convenient operation and maintenance and durability. The temperature of the griddle pan can be regulated in a certain scale according to different cooking requirements. Mainly used for grilling the beef of sandwich and also for other food, it is the first choice for the food industry enterprises such as western food restaurants, fast food restaurants, hotels and supermarkets and etc.

I. Exterior Structure

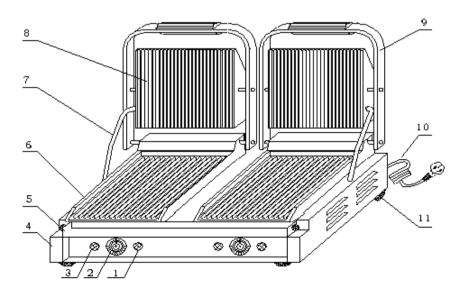



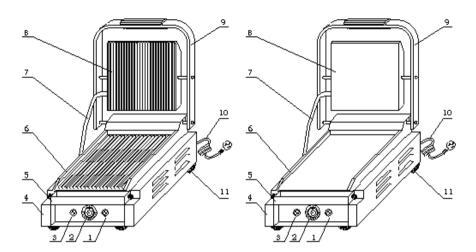

1—HEATING INDICATOR; 2—TEMEPRATURE CONTROLLER; 3—POWER INDICAOTR; 4—BOTTOM BOX; 5—OIL TRAY; 6—LOWER MODULE PLATE; 7—FEED WIRE TUBE; 8—UPPER MODULE PLATE; 9—OPERATION HANDEL; 10—POWER CORD; 11—RUBBER FEET

2. Features of Function and Structure

The upper and lower module plates are enameled and are easy to be cleaned.

One-headed and double-headed grilling pans can be chosen freely.

Independent temperature controlling system are convenient to handle and can achieve energy economy as well.

Internal temperature protector is reliable and safe.

Grilling temperature can be adjusted according to different requirements.

It is made by stainless steel and the drawer-style oil tray is also made of stainless steel.

It is easy to lift up and down and convenient to handle and maintain.

Basic Parameter II.

Name	Contact	Grill	Contact	Grill	Contact	Grill	Contact	Grill	Contact	Grill
	single		single		single		single		single	
	Upper/lov	ver	Upper/lov	wer	Upper		Upper		Upper/lower	
	ribbed		smooth		smooth/le	ower	ribbed/lov	wer	ribbed	
					ribbed		smooth			
Model	TT-WE173A-(A		TT-WE173A-(B		TT-WE173A-(C		TT-WE173A-(D		TT-WE173B	
))))			
Voltage	220~240	/	220~240	V	220~240	V	220~240	V	220~240V	
	50/60Hz		50/60Hz		50/60Hz		50/60Hz		50/60Hz	
Power	1.8KW		1.8KW		1.8KW		1.8KW		2.2KW	
Temperatur	1		1		1		1		1	



- 9 -			····ق	····و		
Weight	28.5kg	26kg	27kg	27kg	31kg	
Dimension	Dimension 570×395×210(mm)				810×370×220(m m)	
size	470×200(IIIIII)			470×200(IIIIII)	, ,	
Upper grill size Lower grill	214×214(mm) 475×230(mm)	214×214(mm) 475×230(mm)	214×214(mm) 475×230(mm)	214×214(mm) 475×230(mm)	340×220(mm) 759×285(mm)	
Temperatur e range	50~300°C	50~300°C	50~300°C	50~300°C	50~300°C	
e controller number	2			L		
Temperatur	2	2	2	2	2	
60/60Hz Power 3.6KW		60/60Hz 3.6KW	60/60Hz 3.6KW	60/60Hz 3.6KW	60/60Hz 4.4KW	
Voltage	220~240V	220~240V	220~240V	220~240V	220~240V	
Model	TT-WE174A-(A)	TT-WE174A-(B	TT-WE174A-(C	TT-WE174A-(D	TT-WE174B	
Model	Upper/lower ribbed	Upper/lower smooth	Upper smooth/lower ribbed	Upper ribbed/lower smooth	Upper/lower ribbed	
Name	Contact Grill double	Contact Grill double	Contact Grill double	Contact Grill double	Contact Grill	
Weight 14kg		13kg	13.5kg	13.5kg	15.5kg	
Dimension	290×395×210(mm)			410×370×220(m m)		
Lower grill size	218×230(mm)	218×230(mm)	218×230(mm)	218×230(mm)	360×285(mm)	
Upper grill size	214×214(mm)	214×214(mm)	214×214(mm)	214×214(mm)	340×220(mm)	
number Temperatur e range 50~300°C		50~300°C	50~300°C	50~300°C	50~300°C	
e controller						

III. **Transportation and Storage**

Please handle the griller carefully and cautiously in transportation and do not turn it upside down to prevent any damage to the shell and interior. The packed griller should be stored in the storehouse ventilation and non-corrosive gas. Any weatherproof measures should be applied when temporary storage.

IV. **Notes**

The working voltage of the equipment should match that of the power supply.



Suitable switch, fuse breaker and three-phase socket should be installed near the equipment.

There is an earth bolt at the back of the equipment. Please connect the earth wire in compliance with the safety regulations reliably with copper cable of no less than 2mm.

Before using user should check whether connection is firm and voltage is regular and earth connection is safe.

Do not put any object onto the upper module plate and shake the lift operation handle with sudden force. Cut off power supply while cleaning. Do not use wet towel with corrosive cleanser and do not directly splash water on the equipment.

The adjustable temperature of the equipment is between 50~200°C. It is recommended that the maximum working temperature normally should be 200~250°C.

Do not store any flammable objects near the equipment. The environment temperature lower than 45°C, the humidity is under 85%.

The installation and maintenance of the equipment should be made by professional technicians.

A. Special Notes

WARNING!

- This product is a commercial machine and it must be operated by trained cook.
- Do not dismantle and refit the machine.

Do not lift the upper module plate with sudden force and tilted installation.

The dismantlement and alteration can cause serious accident happens.

• Before cleaning, unplug the machine and cut off power supply.

Do not spray water directly to the product.

Water can conduct electricity and electricity leakage happens.

• Do not pat the product and put heavy object onto the product.

Incorrect operation can cause the equipment be damaged and dangerous.

• High temperature will cause scald.

When the equipment is in use and before or after using it, do not touch the box and module plate because of high temperature.

• Do not use any power supply which is not coordinated with safety standards.



NOTICE!

- •When the thunderstorm is coming, the electricity supply must be cut off soon.
- It will avoid the equipment being damaged in cause of lightning stroke.
- Do not destroy the control panel and the surface of the machine with hard or sharp things.
- When the machine finishes using, user should close main switch.
- •The installation and maintenance of circuit must be done by certificated special professionals.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a calamity.

٧. **Operation Instruction**

Before using, check whether the power supply installation is regular to make sure the supplied voltage is coordinated with the using one.

Put the plug in the socket and turn on the power.

Turn the temperature controller clockwise to the temperature needed. The yellow indicator is on that shows heating wire begins to heat and the upper and lower griddle begins to raise temperature.

Temperature can be adjusted according to different food preferably within 180°C~250°C. About 8 minutes is needed for the temperature to be raised to 250°C from the power is on.

When the temperature reaches 250°C, lift the upper module plate to a suitable place by operation handle.

Put some edible vegetable oil on the lower module plate and constantly place the food on it. Close the plates and press the handle lightly. Keep an eye on the food until it is suitably done.

When temperature reaches the setting degree, temperature controller can cut off power supply automatically. At the same time, yellow indicator is off and green indicator is on. It shows that electricity heating tube stops working for next turn.

At the lower front of the lower module is the oil tray. Substantial vegetable oil and the animal oil from the meat grilled flow to the oil tray from the lower module plate.

Lift the upper module plate to take the sandwich and other food already done.

When the temperature is a bit lower, the temperature controller can get through power supply automatically. The heating tubes restart to work to heat the module plates.

On completion of the work, temperature controller should be turned to the "off" place. Unplug the equipment and cut off the power.

Notice: There is temperature limiter in the bottom box, the action temperature is 130°C, and reset temperature is <40°C. When temperature is over the protective button it works for protection. When use it again, please use it after press the protective button.



VI. **Cleaning and Maintenance**

Cut off the power supply before cleaning in case of accident.

Do not use wet towel with non-corrosive cleanser to clean the module plate, the surface of the equipment and power cord. Direct wash by water is not permitted in case of any damage of the functions.

If do not use it at any time, please turn off temperature controller and main switch.

Please store the equipment in a ventilated storehouse without corrosive gas after cleaning when ceasing its work for a long time.


VII. **Troubleshooting**

Troubles	Causes	Solutions
1. Module plates are out of	Temperature controller is	Change temperature controller.
heating when the power and	broken.	Change the burned heating tube.
heating indicator are both on.	At least one of heating wires	Dismantle the bottom plate and
	is burned.	use hand to reset temperature
	Temperature protector works.	protector.
2. When the power is on and	1. Temperature controller is	1. Change temperature controller.
temperature controller is	out of order.	
switched and heating indicator is		
on and temperature can be not		
controlled.		
3. Indicator is not on when the	1. Indicator is broken.	1. Change temperature controller.
power is on and the heating		
process is normal.		
The indicator is out of order	Abnormal power supply or	Check power supply and
when the power is on.	cut-off power supply.	connection to make power supply
	Fuse is burned.	be normal.
		Change fuse.


Aforementioned troubles are just for reference. If any fault occurs, please cease using and turn to professional technicians for check and repair.



VIII. **Circuit Diagram**

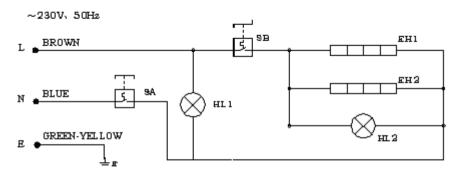

TT-WE173 (A) TT-WE173 (B) TT-WE173 (C) TT-WE173 (D) TT-WE173 (E)

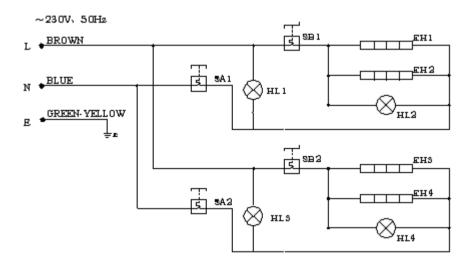

TT-WE174 (A) TT-WE174 (B) TT-WE174 (C) TT-WE174 (D) TT-WE174 (E)

HL1, HL3----POWER INDICAOTR; HL2, HL4----HEATING INDICATOR;

SA, SA1, SA2----TEMPERAUTRE CONTROLLER E----GROUND CONNECTION;

SB, SB1, SB2----TEMPERAUTRE CONTROLLER; EH1, EH2, EH3, EH4----HEATING WIRE;

THE SHELL OF THIS MACHINE MUST BE EARTH GROUNDED FOR SAFETY SAKE. THANKS FOR YOUR COOPERATION.

IX. **Daily Check**

Every day notice the situation of the machine before or after using.



	Whether the machine is tilted		
Before using	Whether the power cord is old, broken or		
	damaged		
	Whether the control panel is damaged		
Whether there is strange smell			
After using	Whether the upper and lower module plate		
	cannot be heated at the same time?		
	Is there any strange voice or is the machine out		
	of control while the machine is lifting		

WARNING!

Must check the machine every day.

Usually check the product that can avoid serious accident happens.

• Stop using if user feels that there are some problems in the circuit or machine.

Ask the special technicians to check and maintain the machine as soon as possible.